


QUICK START GUIDE

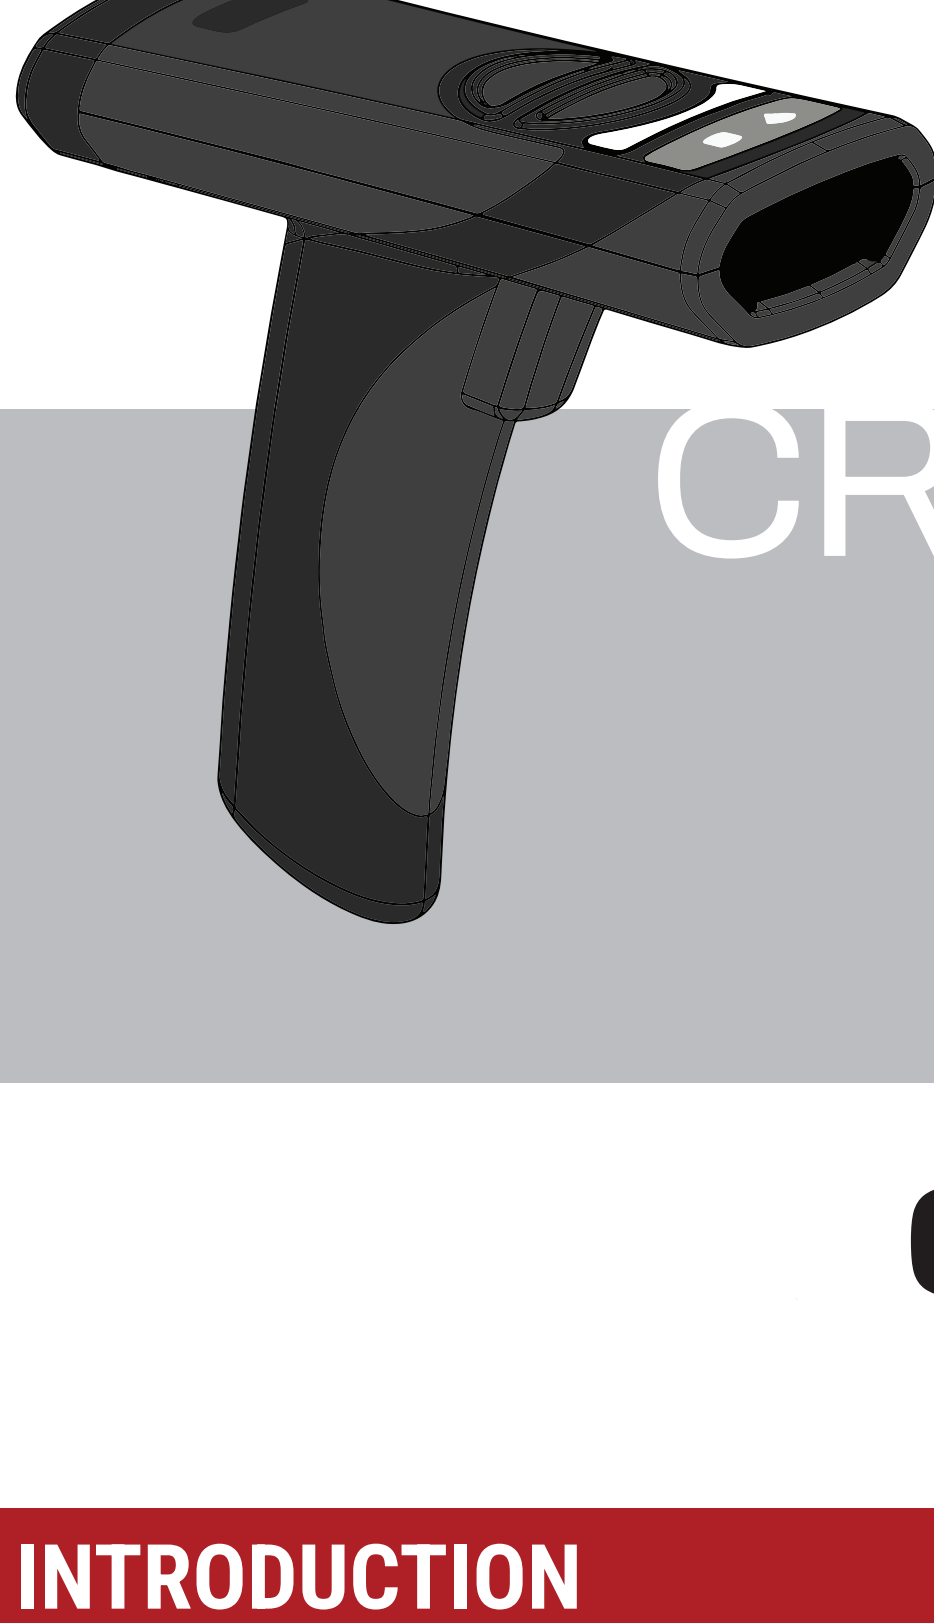

CR2100

VERSION 02
UPDATED: OCT 2024


code
by **BRADY**

INTRODUCTION


The CR2100 is one of Code's fourth-generation barcode readers, combining over twenty years of experience with features for improving the flow of information. We took unparalleled scanning performance and stepped it up a notch, tackling even more damaged and poorly printed barcodes to keep your business moving.

2100 COMPONENTS AND ACCESSORIES

Standard Components

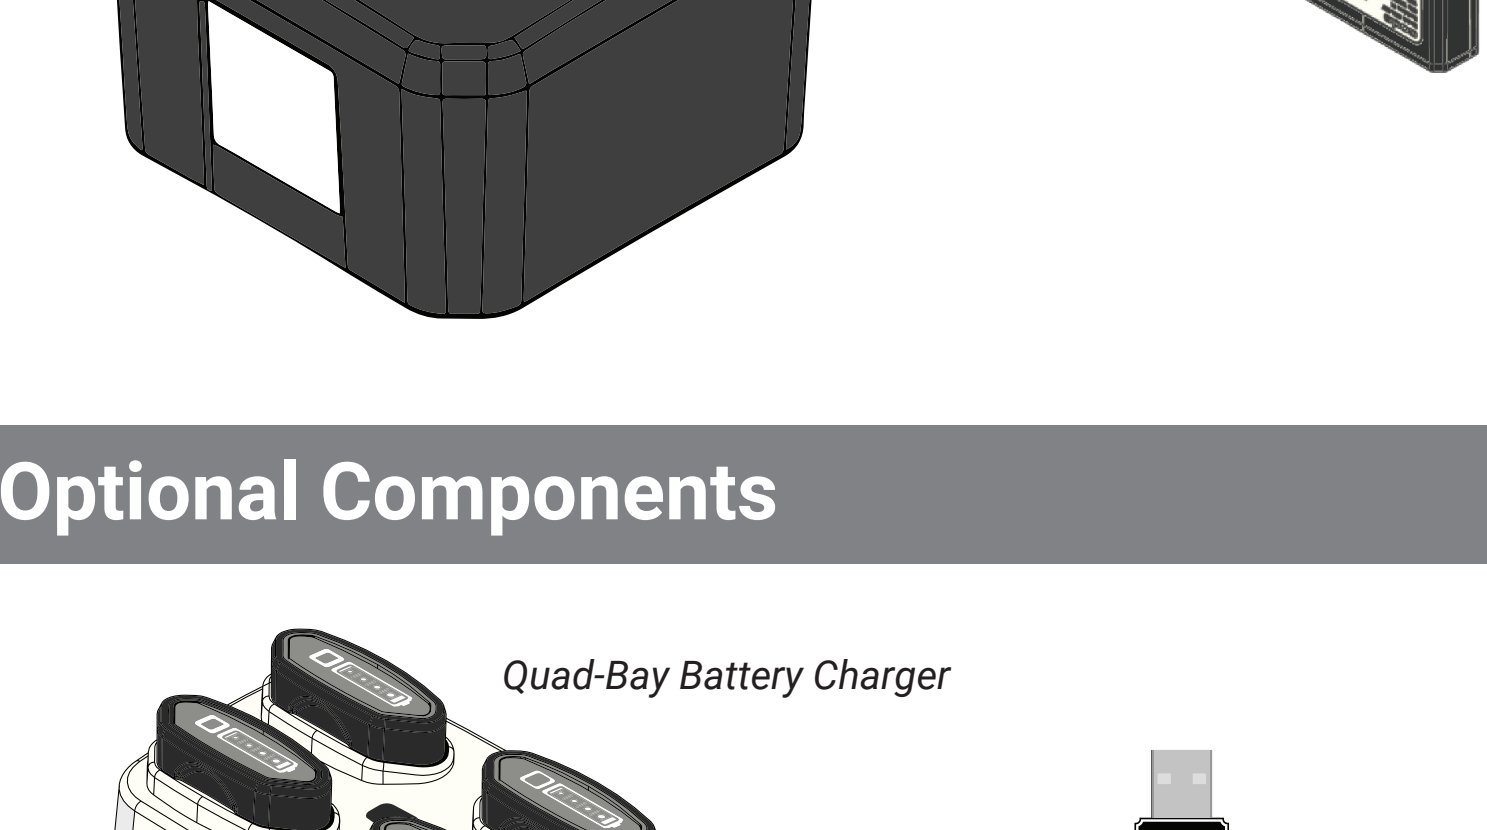


Optional Components

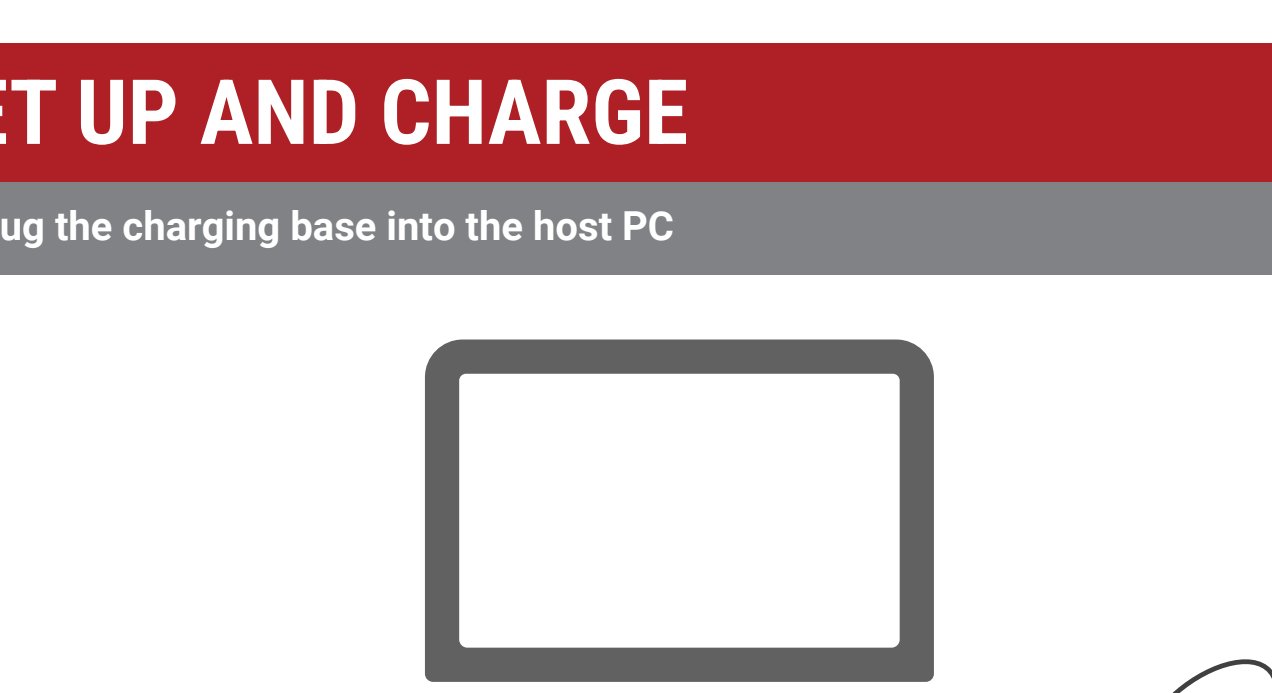


SET UP AND CHARGE

1. Plug the charging base into the host PC

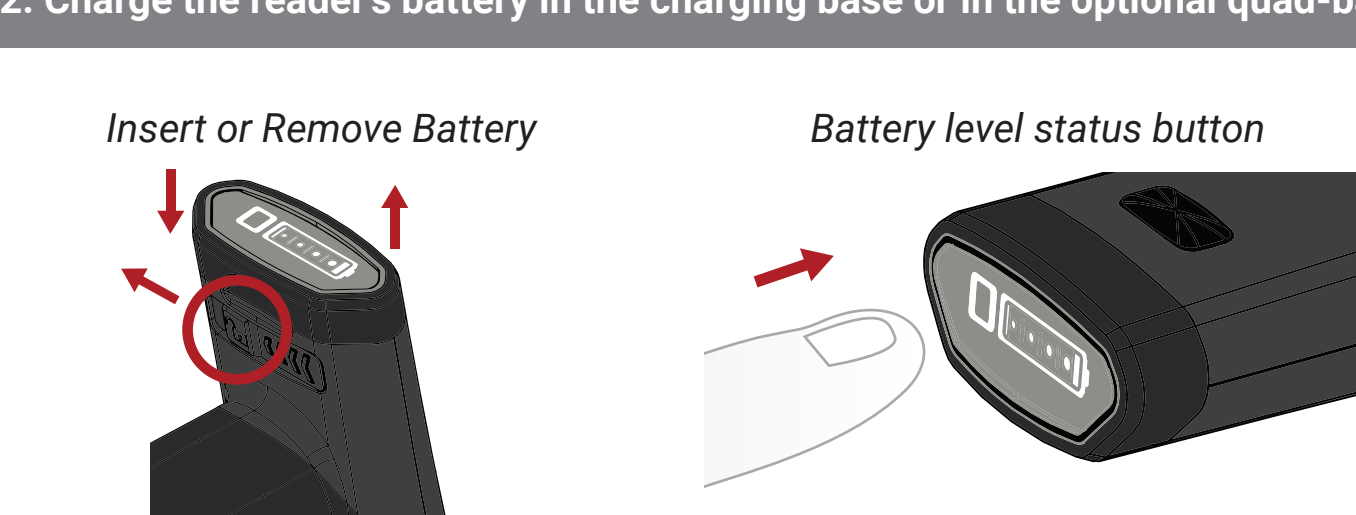


2. Charge the reader's battery in the charging base or in the optional quad-bay charger

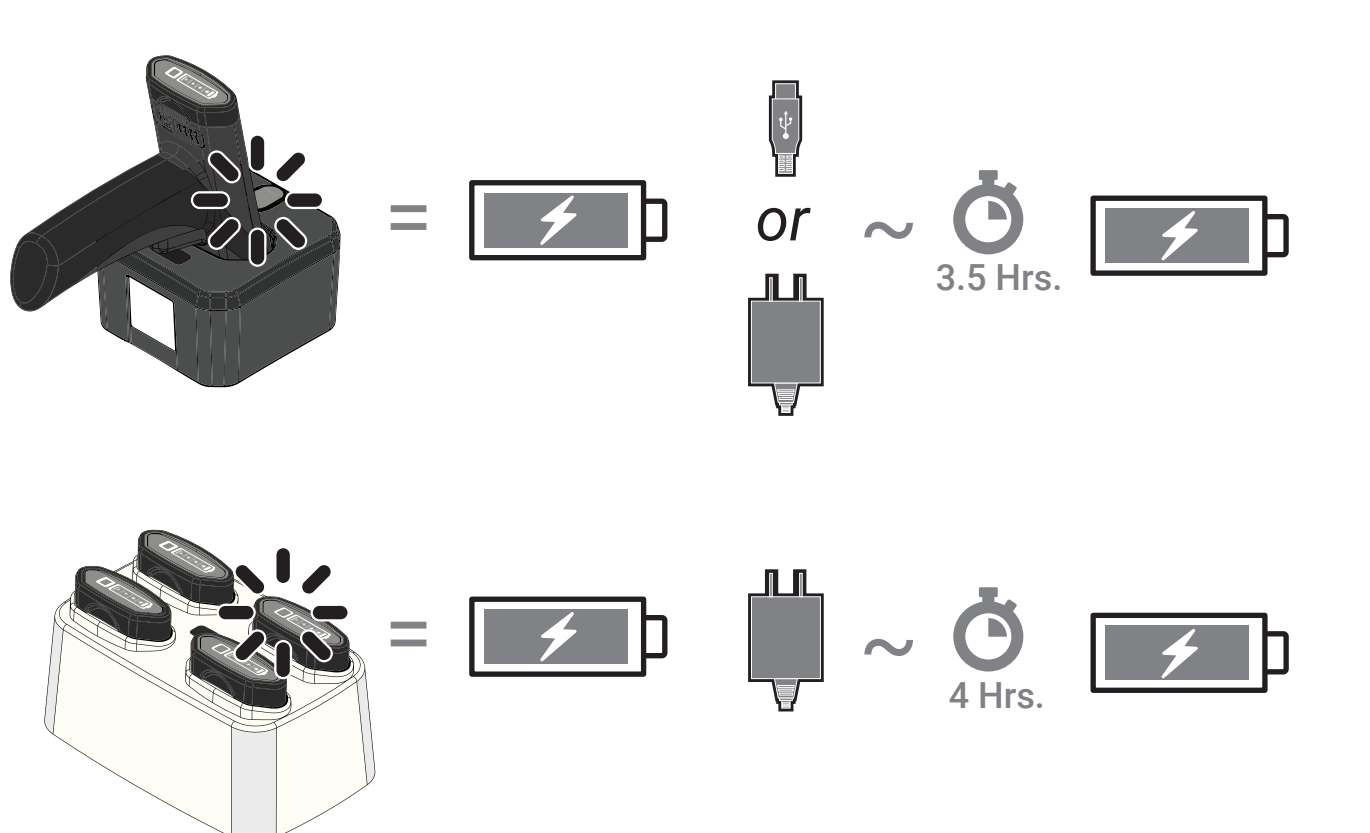

POWER ON


1. Power the reader on by depressing the trigger for 2 seconds

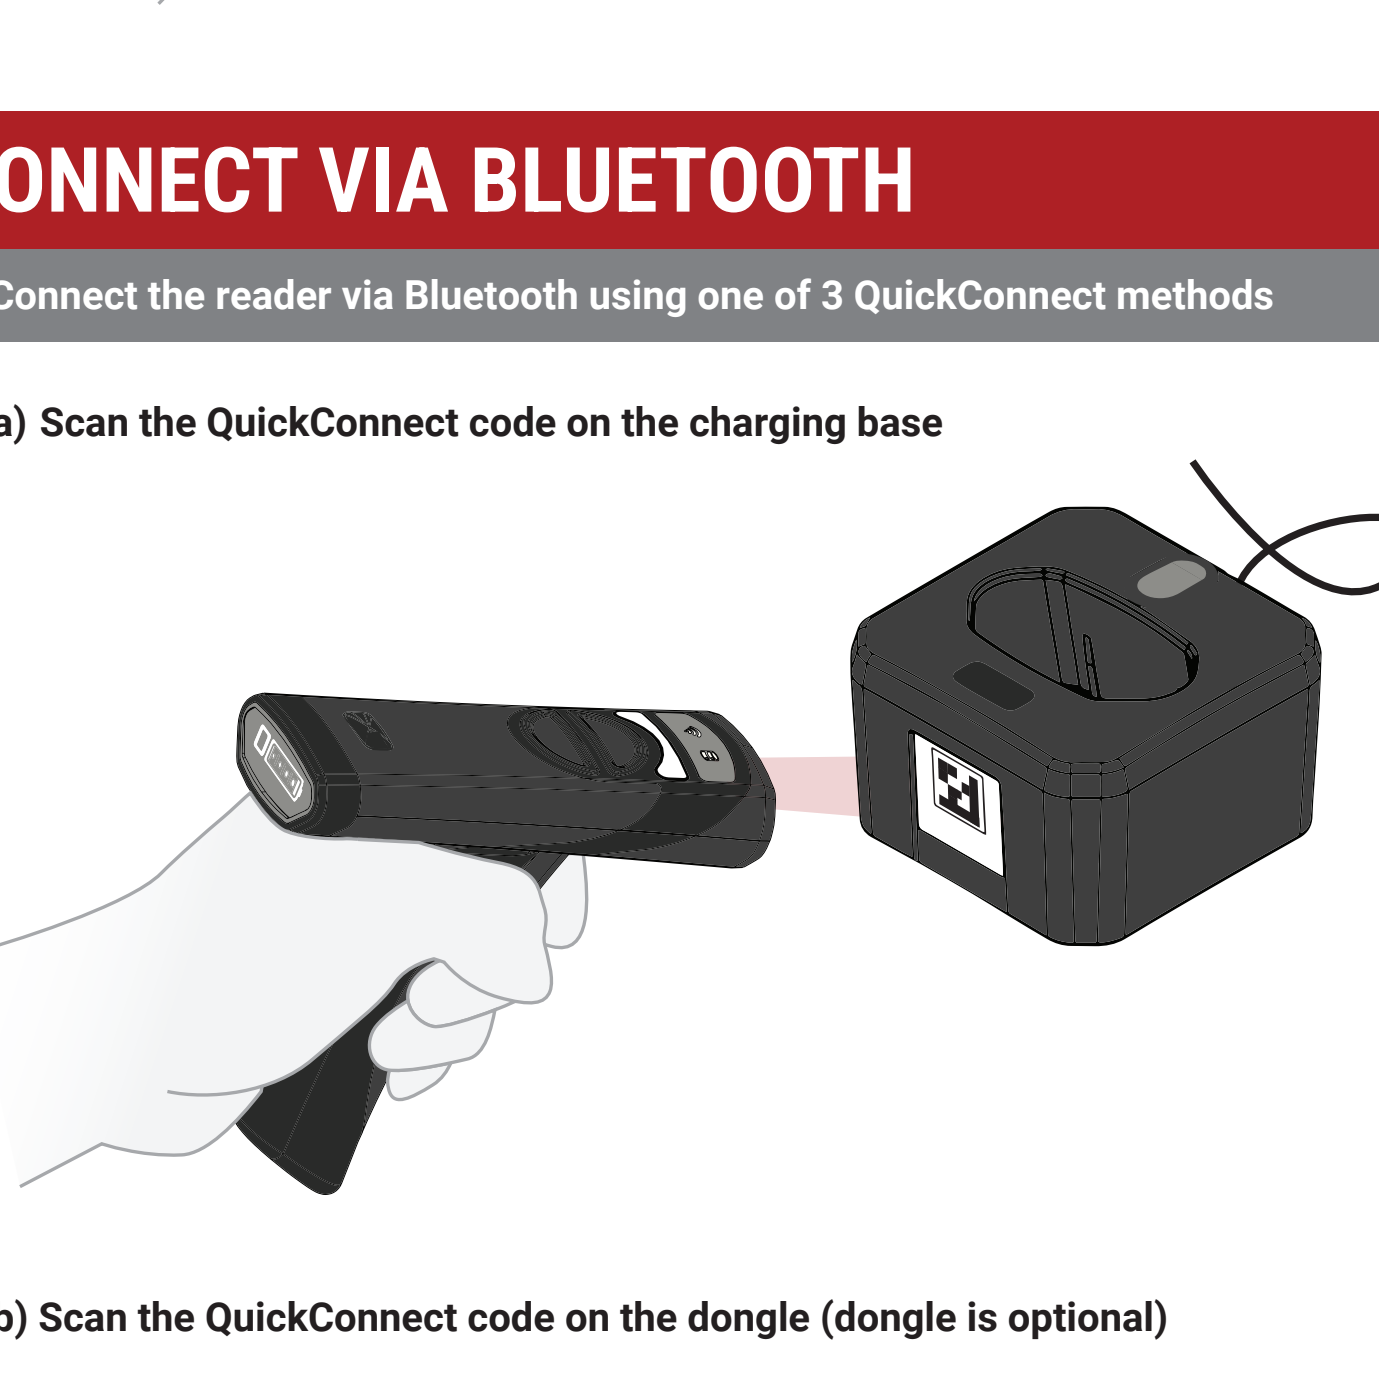

CONNECT VIA BLUETOOTH

1. Connect the reader via Bluetooth using one of 3 QuickConnect methods


a) Scan the QuickConnect code on the charging base

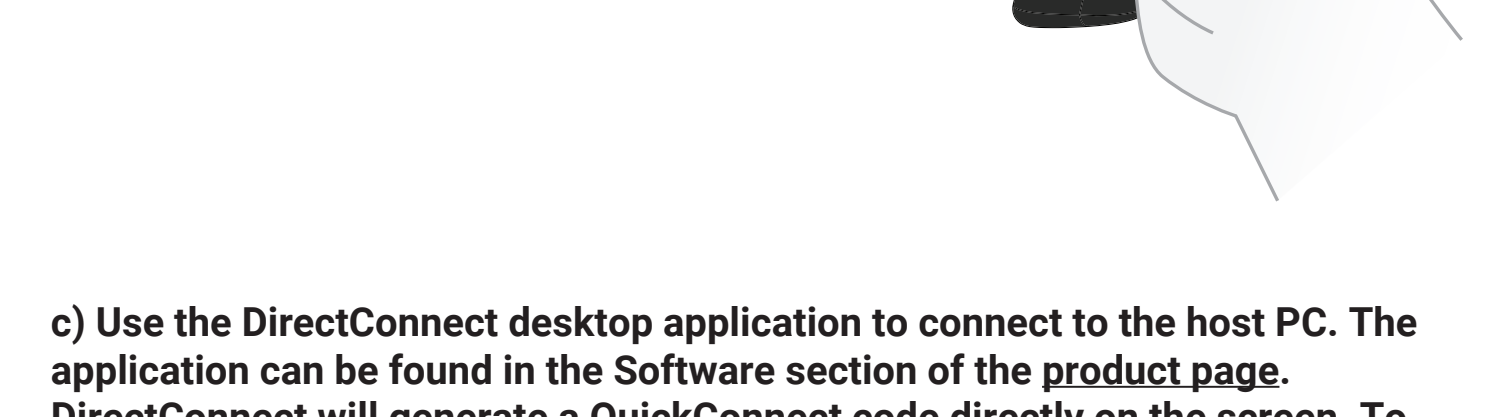


b) Scan the QuickConnect code on the dongle (dongle is optional)



c) Use the DirectConnect desktop application to connect to the host PC. The application can be found in the Software section of the product page. DirectConnect will generate a QuickConnect code directly on the screen. To connect the reader, simply scan the code.

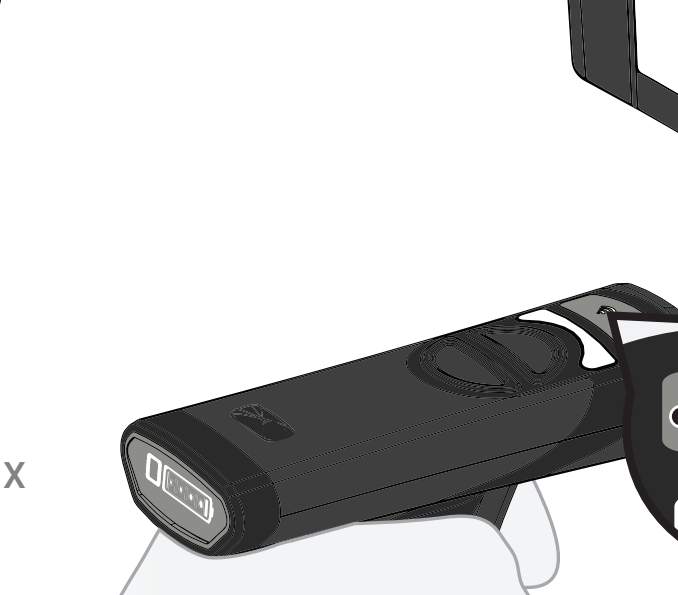


The light on the reader and the charging base or dongle should light up to show it is connected.

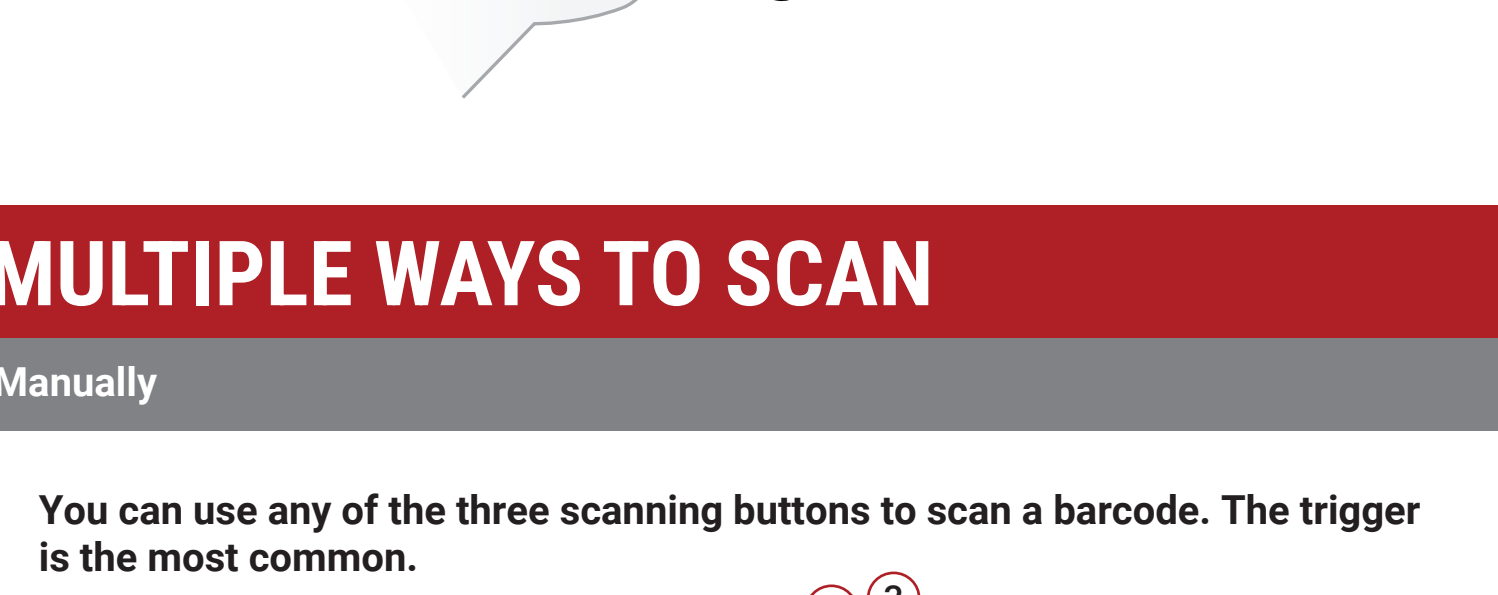

MULTIPLE WAYS TO SCAN


Manually

You can use any of the three scanning buttons to scan a barcode. The trigger is the most common.

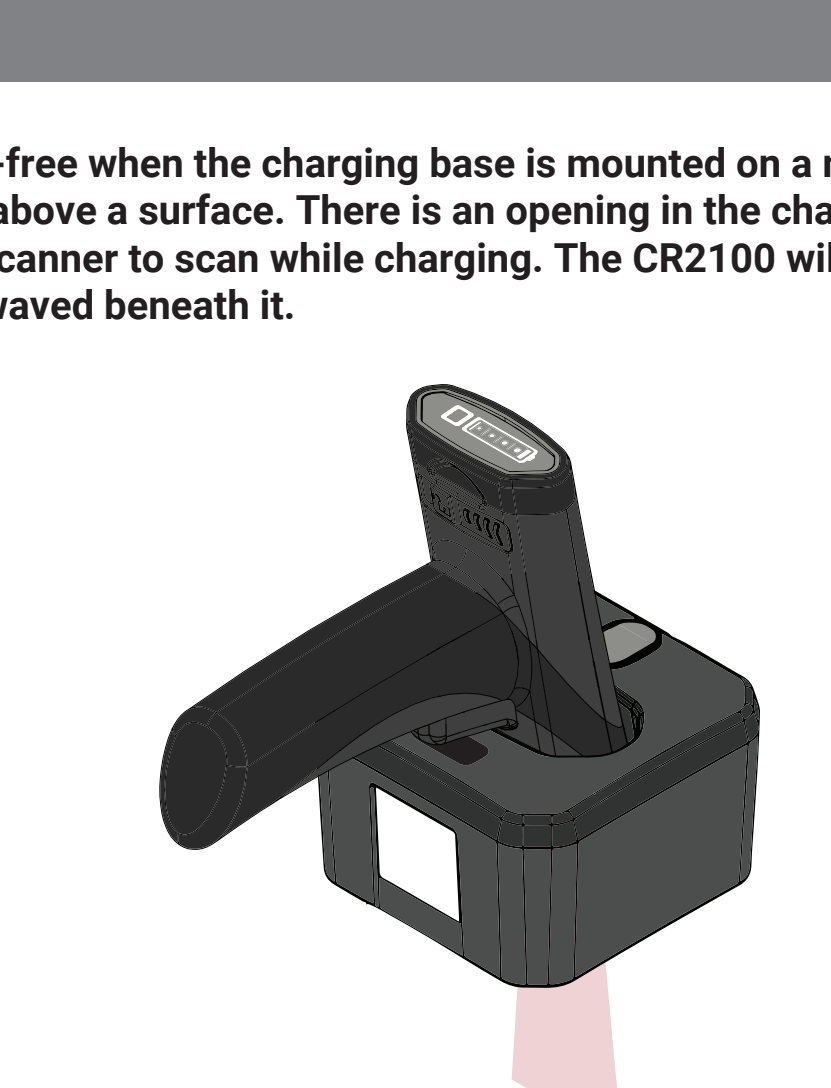


Hands-free

Scan hands-free when the charging base is mounted on a monitor or suspended above a surface. There is an opening in the charging base that allows the scanner to scan while charging. The CR2100 will detect when a barcode is waved beneath it.

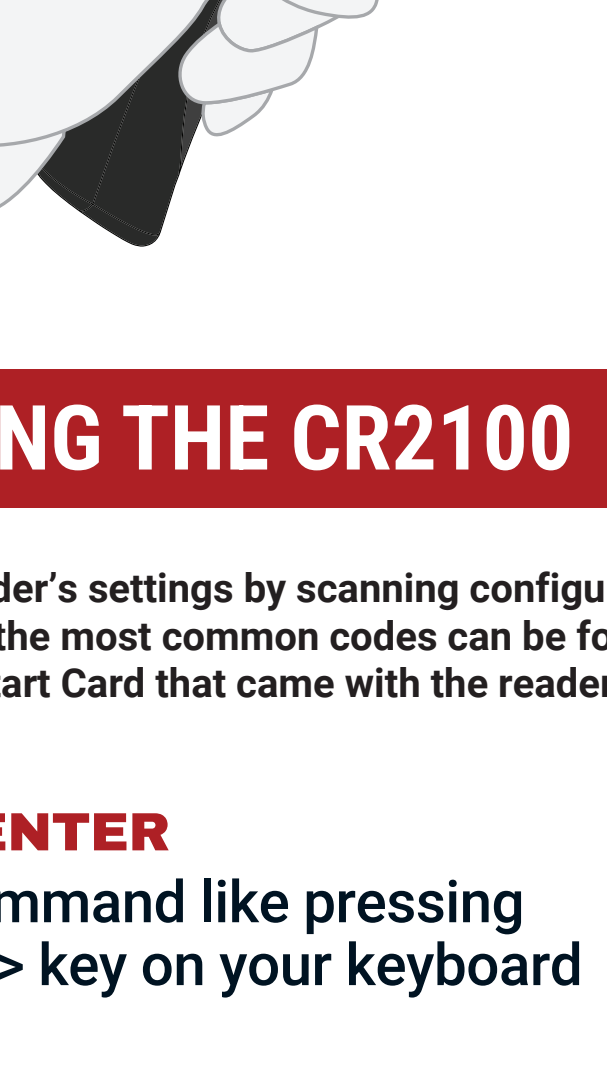

OPTIMAL SCAN RANGE

For best scanning performance, hold the reader approximately 7-12 cm (3-5 inches) away from the barcode.

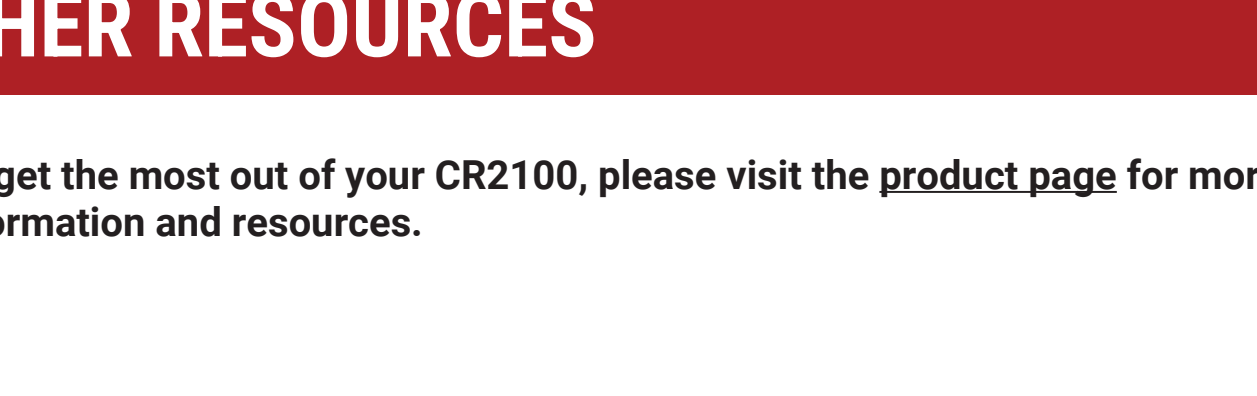

CONFIGURING THE CR2100

Customize your reader's settings by scanning configuration codes for various functions. Three of the most common codes can be found below or on the back of the Quick Start Card that came with the reader kit. Other codes can be found here.

SUFFIX ENTER

Adds a command like pressing the <Enter> key on your keyboard



SUFFIX TAB

Adds a command like pressing the <Tab> key on your keyboard

ERASE SUFFIX DATA

Clears any Suffix commands that have been entered



OTHER RESOURCES

To get the most out of your CR2100, please visit the [product page](#) for more information and resources.