

Quick Start Guide

Step 1. Power Up Printer



AC Power

- Plug Power Supply into an electrical outlet.
- Plug connector end into Power Supply port on side of printer.

Battery

- Turn printer over and locate battery compartment.
- Open battery compartment and insert battery.
- Close battery compartment.

Note: Charge battery pack for a minimum of 5 hours before initial use. Plug in Power Supply to charge battery.

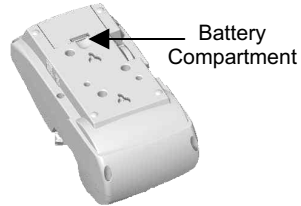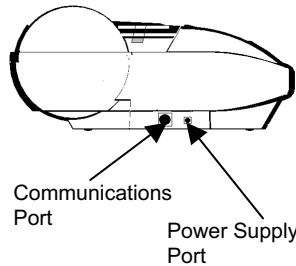


Step 2. Connect TLS PC Link to Your PC

- Locate communications port on side of your TLS PC Link.
- Plug communications cable into communications port and set TLS PC Link next to your PC.
- Locate an unused serial port on back of your PC. Plug free end of communications cable into serial port and tighten screws.

Step 3. Insert Ribbon Cartridge


- Remove cartridge from bag. Avoid touching or creasing ribbon.
- Remove any ribbon slack by rotating take-up spool end clockwise.
- Slide ribbon cartridge firmly into TLS PC Link. *Locking lever must be in unlock position.*
- Push locking lever towards back of TLS PC Link to close print head and lock ribbon cartridge in place.

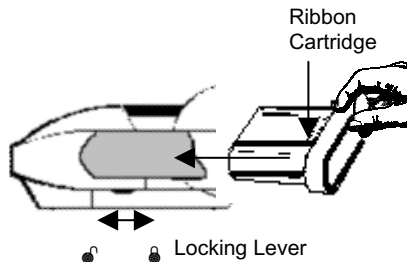

Step 4. Install Media Roll


Insert a media roll:

- Slide locking lever to lock position.
- Press **<Power>** button on top of TLS PC Link.
- Open roll door.
- Pressing guide plate lever down, slide and snap it into a notch that matches your media roll width.
- Making sure media unwinds from top, snap media roll firmly into cradle.
- Feed leading edge of media roll through material guide slots until it meets resistance.
- Press **<Feed>** button on top of TLS PC Link. (Continue to manually push media roll edge until it catches.)
- Press **<Function>** to vertically align media so that top of label is in print position.

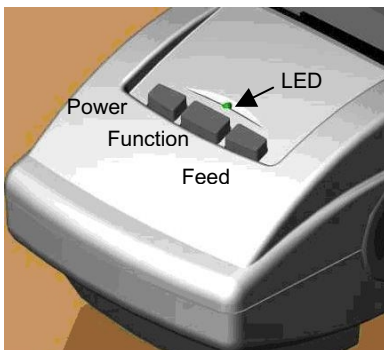

Remove a media roll:

- Cut off printed media with cutter lever.
- Open roll door.
- Slide locking lever to unlock position.
- Back media out of material guide slots.

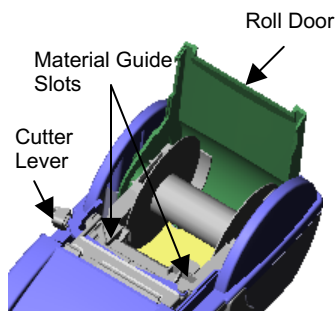

Step 5. Print Labels

Note: A Windows Printer Driver diskette is included with your TLS PC Link printer. You must install the printer driver on your PC in order to print with the TLS PC Link printer. Follow the instructions in the *TLS PC Link™ User's Manual* to install the printer driver.

- Press **<Power>**. The LED indicator flashes red twice then turns solid green.
- Print labels from your labeling software. (Select TLS PC Link from the printer dialog box.)

When the printer is receiving data from your PC, the LED indicator will blink—green if the printer is functioning properly, or red if there is a printer error.

A red LED indicates an error. After correcting the error, press **<Function>** to align the media and clear the error. The LED will turn green. Refer to the *TLS PC Link™ User's Manual* for information on diagnosing and correcting printer errors.

To power down printer, press **<Power>**. Although the printer takes a few seconds to power down, the LED indicator will turn off immediately.

